

LPG Safety:

• Always turn portable heaters off, at both the cylinder valve and the electrical supply, before leaving the Club.

- If you smell gas, turn all appliances off immediately and ventilate the building. Give a warning to other Members.
- Do not use aerosols, spirit-based solvents, petroleum-based adhesives or any flammable liquids/sprays in close proximity to the heater.
- Avoid sitting or standing too close to the heater
- Always ensure that the room is well-ventilated and open a door if it becomes stuffy to allow fresh air to circulate.
- Ensure that the position of any heater is not blocking any gangways or escape routes.
- Never place clothing or any other items over the heater.
- Do not move the heater whilst it is in use.
- Always plug a heater unit directly into a wall socket. If you must use an extension lead this must be fully unwound to prevent overheating.
- Double sided "Cylinder Labels" are provided to indicate those in use and those that are MT, (Empty).
- A valve spanner is provided with each cylinder to ensure that the regulator is tightened sufficiently.
- The hoses should be inspected regularly for signs of cracking or general wear and tear and replaced if needed.

Turn off any heater immediately if any defect is found and report it to any of the Club's Directors.

To order replacement gas cylinders, an order can be made with our supplier who will deliver the cylinders directly to the Clubroom, generally on a Wednesday between 11:00 & 15:00, and take away the empty units.

**Telephone "The Motorists Centre" on 01425 612943
Please inform the Club Treasurer of the order.**

